



EV West - Dilithium BMS Power and Warning Light Loops

Revision 1.1 - 2/21



Note: For correct operation you must configure the Dilithium BMS in the serial terminal tool for dual outputs. This can be done by sending the following commands:

SEND: `enable loopclosedonflt` command to BMS

SEND: `enable loopoc` command to BMS

