



# EV West - Dilithium BMS EVCC Basic / AVC2

Revision 1.0 - 3/23



Note: For correct operation you must configure the Dilithium BMS in the serial terminal tool for dual outputs. This can be done by sending the following commands:

SEND: `enable loopclosedonfit` command to BMS

SEND: `enable loopoc` command to BMS

