EV COOLING SYSTEM — PLUMBING SCHEMATIC

Hyper 9 & Universal Inverter / Battery Liquid Cooling Kit · Model EVW-COOL

FLOW ORDER
RESERVOIR → PUMP → INVERTER → RADIATOR → RESERVOIR

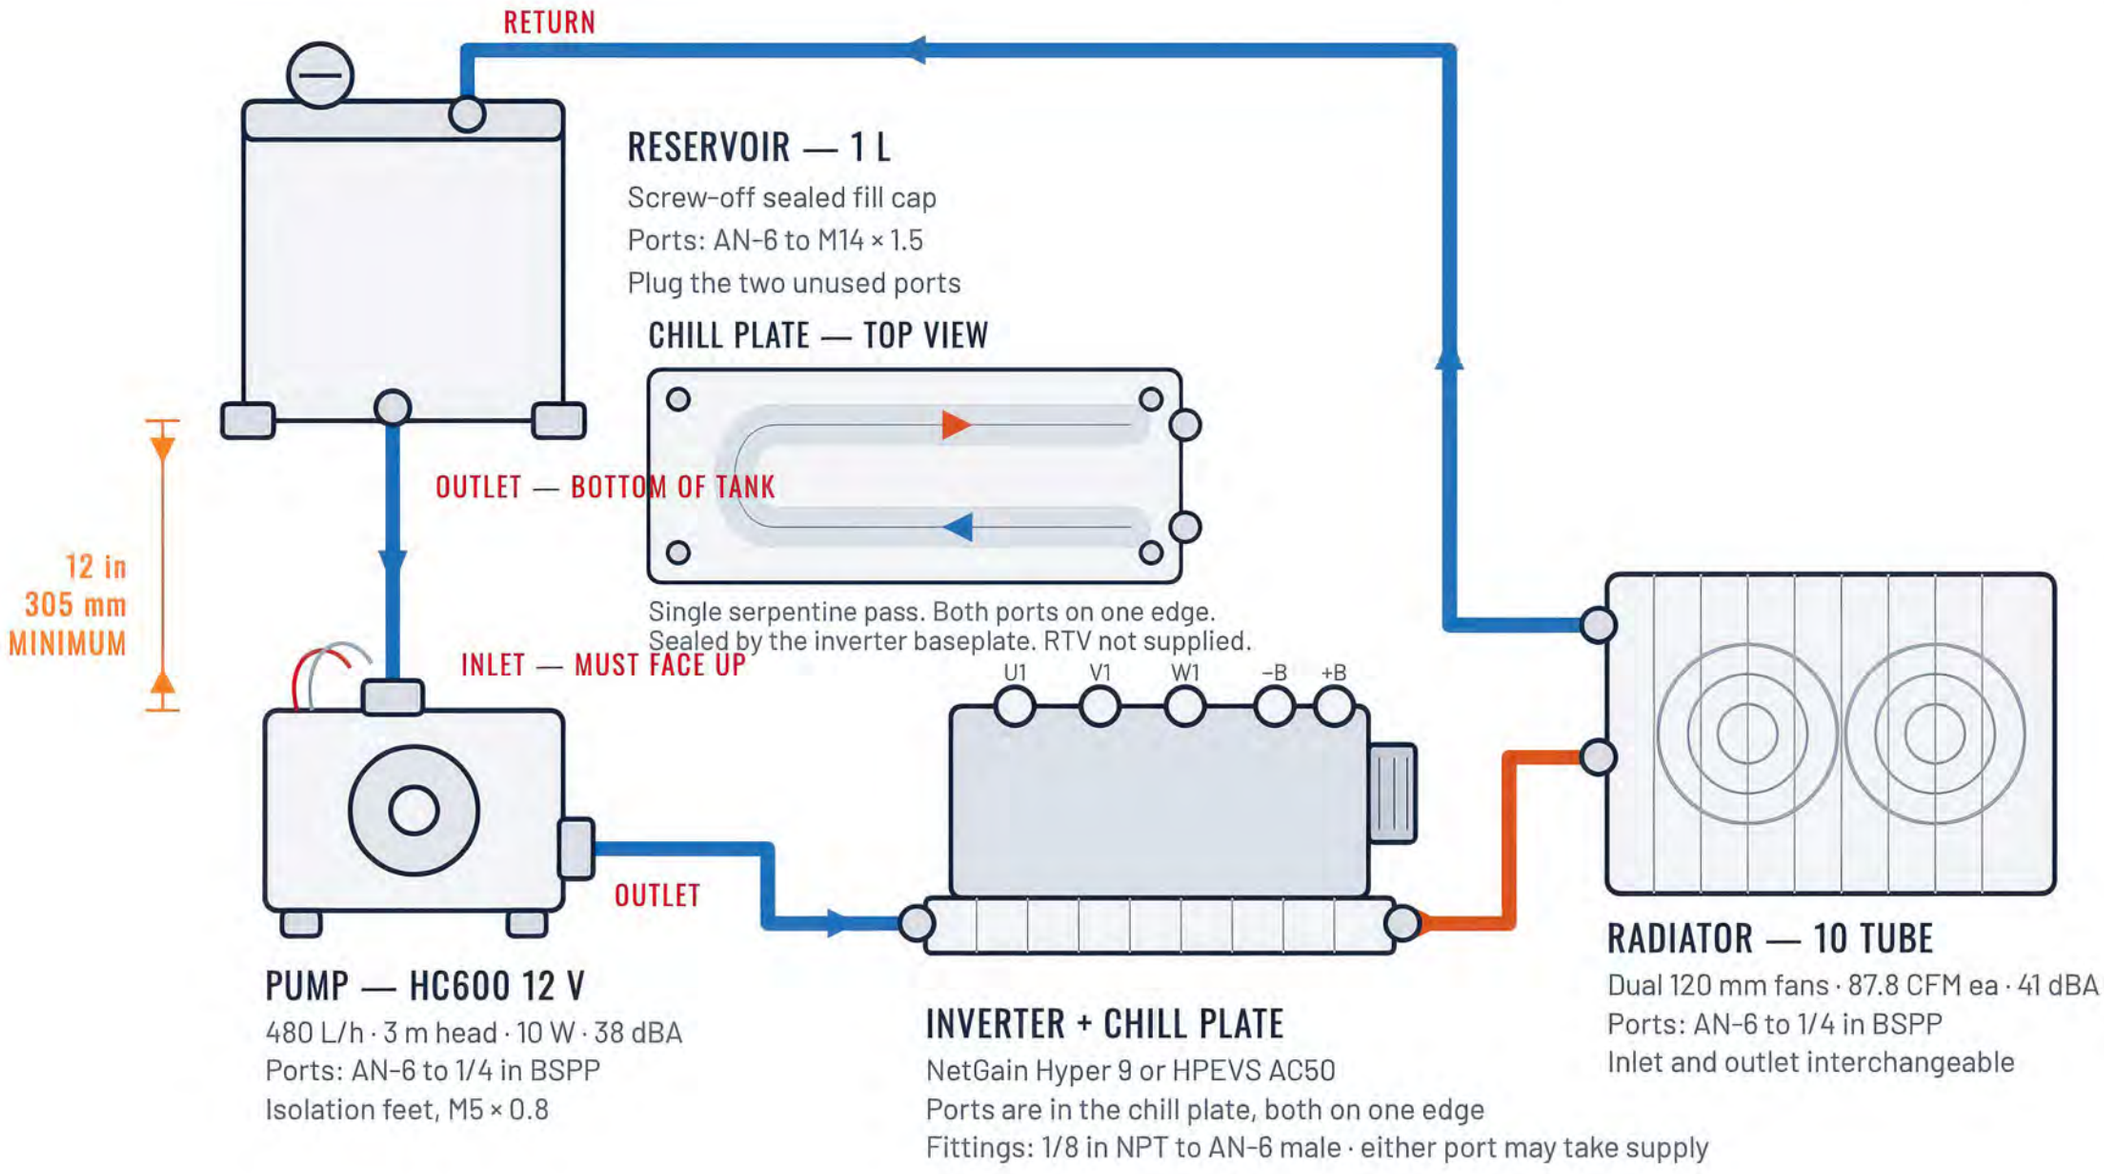

COOLANT

- Cooled
- Heated

Reservoir sits at least 12 in above the pump. Gravity head keeps the pump primed.

Pump inlet faces up. Any other orientation traps air at the impeller.

Reservoir outlet is the bottom port. Plug the two unused M14 × 1.5 ports.

Inverter and radiator ports are interchangeable. Either port may take supply.